



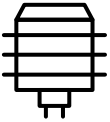

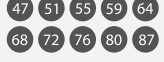



## SENSOR WIRING TABLE

Sensor Model	Manufacturer Cable Colors		Kintech Cable Colors		Orbit 360			EOL Zenith	
					Section	Terminal	Type	Section	Terminal
	●	Black	●	Brown	Analog Channels		(-)	Analog Inputs	
	○	White	○	White	Analog Channels		Signal	Analog Inputs	
	●	Red	●	Green	Power Input	50 54 58 62	5V	Extra Analog	
		Shield	●	Yellow Green	Power Input		⏏	Analog Inputs	
								BAT	

### HOW TO CONFIGURE IN ATLAS

Open Atlas and go to the data logger you are working on. Scroll to the “channels” section and select the following type and model:

- Group: Analog channels
- Sensor Type: Temperature
- Sensor Model: **NRG 110S**

### HOW TO CONFIGURE IN EOL MANAGER

Open EOL Manager and go to the data logger you are working on. Open the “inputs” tab and select the following type and model:

- Group: Analog Inputs
- Type: Temperature
- Model: **NRG 110S**

