


SENSOR WIRING TABLE

Sensor Model	Manufacturer Cable Colors		PT100 Transmitter* Kintech Colors				Orbit 360			EOL Zenith	
							Section	Terminal	Type	Section	Type
	● Brown	Brown	A	K	● Brown	Brown	Analog Channels	47 51 55 59 64 68 72 76 80 87	(-)	Analog Inputs	- -
							○ White	White	B	L	○ White
	Power Input		+	Extra Analog	1 2 3 4 5 6 7 8						
					● Green	Green	Power Input			BAT	+
				● Yellow	Yellow	Power Input		(-)	BAT	-	

Note: \*PT100 transmitter is provided by Kintech Engineering.  
 Consult to the Solar department (solar@kintech-engineering.com) for its configuration and Slope and Offset.

HOW TO CONFIGURE IN ATLAS

Open Atlas and go to the data logger you are working on. Scroll to the “channels” section and select the following type and model:

- Group: Analog channels
- Sensor Type: Voltage
- Sensor Model: **VOLTS**

HOW TO CONFIGURE IN EOL MANAGER

Open EOL Manager and go to the data logger you are working on. Open the “inputs” tab and select the following type and model:

- Group: Analog Inputs
- Type: Voltmeter
- Model: **Generic Voltimeter**

