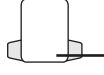

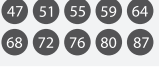
 


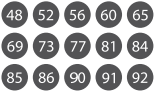







**SENSOR WIRING TABLE**

Sensor Model	Kintech Cable Colors	Orbit 360			EOL Zenith	
		Section	Terminal	Type	Section	Terminal
	 Brown	Analog Channels		(-)	BAT	
	 White  10kΩ	Analog Channels		Signal	Analog Inputs Extra Analog	 
	 Yellow-Green	Power Input			BAT	

**HOW TO CONFIGURE IN ATLAS**

Open Atlas and go to the data logger you are working on. Scroll to the “channels” section and select the following type and model:

- Group: Analog channels
- Sensor Type: Voltage
- Sensor Model: **VOLTS**
- Slope: 1
- Offset: 0

**HOW TO CONFIGURE IN EOL MANAGER**

Open EOL Manager and go to the data logger you are working on. Open the “inputs” tab and select the following type and model:

- Group: Analog Inputs
- Type: Voltmeter
- Model: **Generic Voltmeter**
- Slope: 1
- Offset: 0

Last modified: 23.03.2020

For more information please contact [support@kintech-engineering.com](mailto:support@kintech-engineering.com) or visit our website [www.kintech-engineering.com](http://www.kintech-engineering.com)

