






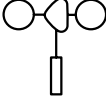



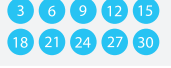


THIES SMALL 4.35.15.30.XXX | CUP ANEMOMETER

SENSOR WIRING TABLE

Sensor Model	Sensor Pin	Kintech Cable Colors	Kintech Connector R:3k3 (0.1%)	Orbit 360			EOL Zenith			
				Section	Terminal	Type	Section	Terminal		
	SIG HIGH	White	A		Red	Frequency Channels		5V	Anemometer Inputs	
	SIG LOW	Brown	B		Black	Frequency Channels		(-)	Anemometer Inputs	
					Green	Frequency Channels		Signal	Anemometer Inputs	
	Shield	Yellow - Green		Yellow - Green		Power Input			BAT	

HOW TO CONFIGURE IN ATLAS

Open Atlas and go to the data logger you are working on. Scroll to the “channels” section and select the following type and model:

- Group: Frequency channels
- Sensor Type: Anemometer
- Sensor Model: **THIES SMALL**

HOW TO CONFIGURE IN EOL MANAGER

Open EOL Manager and go to the data logger you are working on. Open the “inputs” tab and select the following type and model:

- Group: Anemometers/Frequency
- Type: Anemometer
- Model: **THIES P6137**

Last modified: 06.02.2020

For more information please contact support@kintech-engineering.com or visit our website www.kintech-engineering.com

