






















## VECTOR W200P | WIND VANE

### CABLE RECOMMENDATION

Signal cable up to 150m: **3x0.5 mm<sup>2</sup> + shield**. For longer cable, please consult sensor manufacturer.

### SENSOR WIRING TABLE

Sensor Model	Sensor Pin Manufacturer Cable Colors		Kintech Colors		Orbit 360			EOL Zenith		
					Section	Terminal	Type	Section	Terminal	
		Blue	Supply (-)		Brown	Analog Channels		(-)	DIR	
		Yellow	Output (-)						Analog Inputs	
		Green	Signal		White	Analog Channels		Signal	DIR	
									Analog Inputs	
		Red	Supply (+)		Green	Analog Channels		*5n	DIR	
									Analog Inputs	
	Black	Shield		Yellow Green	Power Input			BAT		
	White	Do not connect								

**Note:** \*5n,  = Pulsating 5V with current limited (4mA). Only 1 sensor must be powered.

### REQUIRED DATA LOGGER VERSION

Minimum data logger required: **ORBIT 360 BASIC PLUS**.

Minimum **firmware** required: **any**

### HOW TO CONFIGURE IN ATLAS

Start Atlas and open the data logger you are working on. Now go to *Site settings* and scroll down to the *Channels* section and select the following type and model:

- Group: Analog channels
- Sensor Type: Windvane
- Sensor Model: **Vector W200P**

**Important!** Please make sure you are working with the latest version of Atlas. To check for new updates click the *Check for updates* button in the left-hand menu located in the main dashboard.



## VECTOR W200P | WIND VANE

### HOW TO CONFIGURE THIS SENSOR ON SITE

We recommend performing the entire sensor configuration using Atlas at the office before installing sensors onsite. Once the sensor is correctly setup in Atlas, use the *Upload settings* tool, to upload the sensor configuration to the data logger.

In case you are already on site and need to configure the sensor directly on the data logger, follow these steps:


1. Turn on the data logger.
2. Using the keypad on the data logger, navigate the menu until you see *Sensor model*, then click the “right arrow” on the keypad.
3. Now scroll down to the channel you are going to connect the sensor to, and click the “right arrow” on the keypad.
4. Now click “Set” on the keypad and scroll up in the menu to set the sensor model type according to the table here below. Once you have found the correct sensor model, click the “right arrow” key twice to select it and save.
5. Click the “left arrow” several times to go back to the main menu.

Data logger model	Firmware version	Sensor model type on data logger		
		Magnitude	Number	Name
ORBIT 360	any	Wind direction	14	VANE VECTOR W200P
EOL ZENITH	any	Wind direction	04	VECTOR_W200P

### HOW TO CONFIGURE IN EOL MANAGER

Open EOL Manager and go to *Settings* of the data logger you are working on. Open the *Inputs* tab and select the following type and model:

- Group: Wind Vanes / Analog Inputs
- Sensor Type: Windvane
- Sensor Model: **VECTOR W200P**

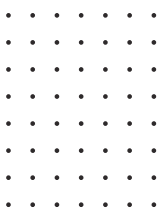

Last modified: 24.09.2021