


# INSTALLATION GUIDE

## EOL Zenith Wiring Panel

Items needed for the installation. All items from B to E are included in the box together with the Wiring Panel.


**A** EOL Zenith data logger with terminal blocks

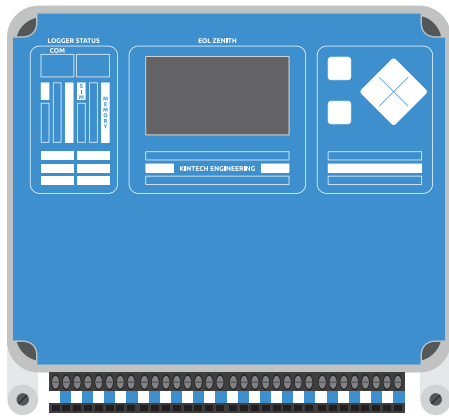


**B** Metallic holder for Wiring Panel



**C** Interconnection boards x2

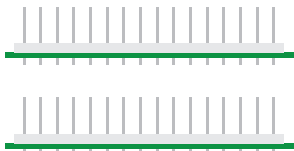


**D** Wiring Panel

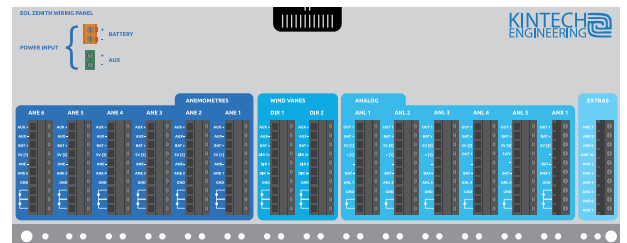


**E** Rivets




1 Identify the lower screws holding the data logger.

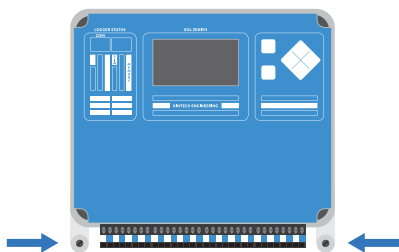


2 Detach the data logger and use those lower screws (M5x20) to install the metallic holder.

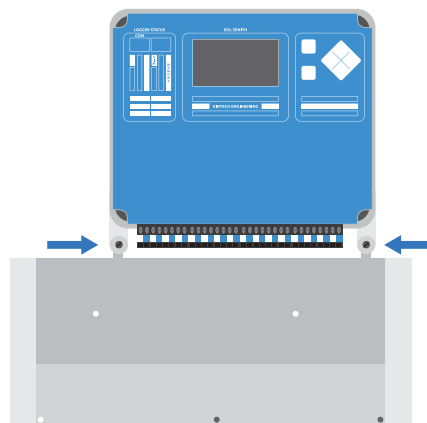


3 Mount the interconnection boards to the data logger. Digital Input 1 and Digital Input 2 terminals are free.

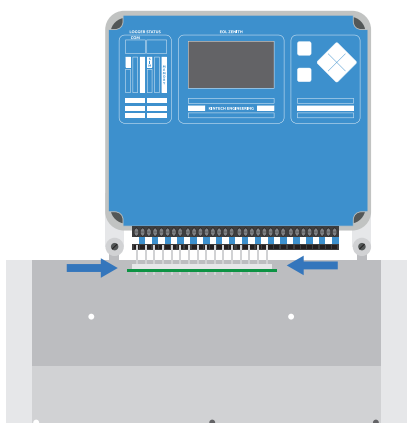

4 Slide the Wiring Panel onto the metallic holder until the black connector of the Wiring Panel is inserted to the interconnection boards.

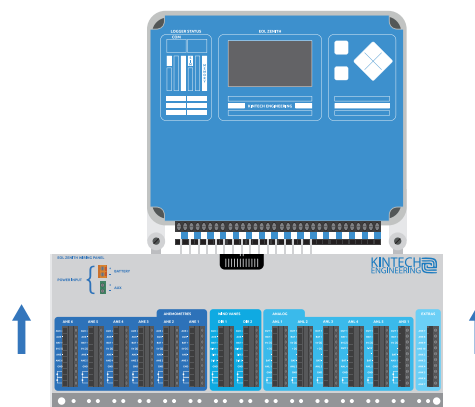

5 Place the two rivets on the Wiring Panel to secur it to the metallic holder.

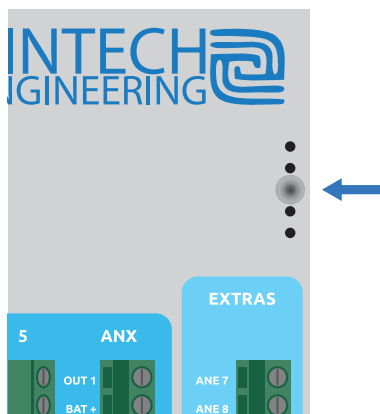

6 Screw the separators from the Wiring Panel to the metallic holder.

