











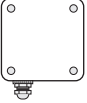

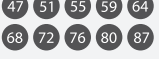



SENSOR WIRING TABLE

Sensor Model	Manufacturer Cable Colors		Kintech Cable Colors		Orbit 360			EOL Zenith	
					Section	Terminal	Type	Section	Terminal
		Black		Brown	Analog Channels		(-)	BAT	
		White		White	Analog Channels		Signal	Analog Inputs	
		Red		Green	Power Input			Extra Analog	
		Shield		Yellow Green	Power Input			BAT	

HOW TO CONFIGURE IN ATLAS

Open Atlas and go to the data logger you are working on. Scroll to the “channels” section and select the following type and model:

- Group: Analog channels
- Sensor Type: Voltage
- Sensor Model: **VOLTS**
- Slope: 20
- Offset: 0

HOW TO CONFIGURE IN EOL MANAGER

Open EOL Manager and go to the data logger you are working on. Open the “inputs” tab and select the following type and model:

- Group: Analog Inputs
- Type: Voltmeter
- Model: **Generic Voltmeter**
- Slope: 20
- Offset: 0

